



## Vehicle Acceptance Body

### CERTIFICATE OF ENGINEERING ACCEPTANCE

This certificate formally records that the following vehicle conform with the appropriate mandatory requirements as set out in **Railway Group Standards**

**NAME OF CERTIFICATION BODY**  
Network Rail Vehicle Acceptance Body

**ACCREDITATION CODE**  
**RT**

**Vehicle Type & Class:** Road Rail Vehicle Rexquote Case 988 SP2S – Type 9B

**Vehicle Number(s):** 99709 940588-5

**Vehicle Operator:** William Bradshaw Ltd

**Vehicle Owner:** William Bradshaw Ltd

**Issue Date:** 21<sup>st</sup> December 2012

**Authorised by:**

*A.V. Kemp*


**Expiry Date:** 22<sup>nd</sup> April 2017

**Print Name:**

**A. V. Kemp**

**NETWORK RAIL VAB**

**OFFICIAL STAMP**

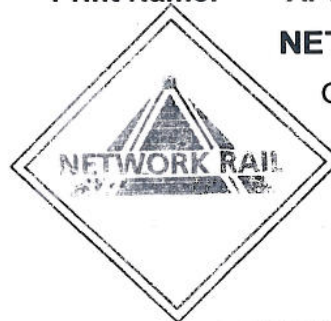

VEHICLE ACCEPTANCE BODY

#### Special Limitations:

##### A. RRV CONFIGURATION

- Vehicle is Rexquote rail-conversion of road excavator with 1.8m boom, 3.13m artic and 2.1m dipper.
- RRV is fitted with a Prolec RCI Serial No. 130271/323175 which must be operational during all lifting duties and when used with attachments which affect machine stability; RCI software version V2.09, and Duty Charts CGG0232254. Lifting shall only be undertaken through the identified dipper lifting point. The Auxiliary Load Lifting Point maximum of 10.0 tonnes SWL shall NOT be exceeded.
- It may work with a range of attachments through the dipper link pins or quick hitch, See E.
- It operates on rail in high-mode only. It has no load carrying capability.
- Permitted number of personnel to be carried: 1 in cab.

##### B. RRV ON & OFF TRACKING AND EMERGENCY RECOVERY

- For on/off tracking, a site-specific work plan for one of the following conditions shall be used. The work plan shall be in compliance with the Rexquote Manual RQM10094 and Network Rail Specification NR/L2/RVE/007:-
  - > Maximum track cant 100mm and/or gradient 1:29, on an approved RRAP
  - OR
  - > A risk assessed procedure that is specific to the on and off tracking point.

Page Number	Certificate Number
1 of 4	RT/EA/0477/12

Owner Copy / ~~Customer Copy~~ / Network Rail VAB Copy



## Vehicle Acceptance Body

2. For recovery refer to the Rexquote Manual. Maximum speed 3mph (5km/h) to avoid damage to the RRV.

### C. RRV GAUGE

1. Travelling mode – RRV is within W6a gauge and exception for road wheels as RIS-1530-PLT. When travelling, mirrors must be folded in.
2. Working mode – the counterweight, boom, dipper and attachments can be out of gauge, dependent on the Prolec Rated Capacity Indicator (RCI)/slew settings in use.

### D. RRV LIMITATIONS OF USE

1. It shall only operate inside possessions.
2. It shall NOT on/off track or work, if adjacent lines are open to traffic.
3. It shall NOT on/off track, travel and work on live conductor-rail lines.
4. It shall NOT on/off track, travel or work under live OLE, except as D5.
5. It may on/off track at a level crossing or travel under live OLE, when used in conjunction with a safe system of work determined and authorised in accordance with the requirements of GE/RT8024, and provided the boom/dipper is in the travel position, subject to a minimum OLE wire height of 4.165m.
6. For access/egress, the RRV shall only operate with the door to the cab adjacent to a cess or a line closed to all train movements, or the safe system of work to be adopted takes account of adequate clearances to adjacent lines.
7. Permitted speed:
  - Maximum – 20mph (32km/h);
  - Switches & Crossings, and Raised Check Rails – 5mph (8km/h);
  - Towing/Propelling – 10mph (16km/h).
8. Travelling Mode.  
The RRV may travel on track that does not exceed:
  - Cant 200mm;
  - Gradient 1:29.
9. Working Mode.  
The RRV shall not work on track that exceeds any combination of:
  - Cant 150mm;
  - Twist 1/150 over the RRV wheelbase (27mm twist);
  - Gradient 1:29.
10. Limitation to ensure stability:
  - Controlled by Prolec RCI which shall be active when the RRV is in use, except as E1.
  - Movement of boom towards backward stability limit shall be at moderate/low speed.
  - Permitted to lift and carry through 360 degrees operation, see Duty Charts.
11. It is permitted to tow and/or propel rail trailers with compatible parking brake and coupling system. Maximum un-braked towed/propelled weight shall not exceed 21 tonnes. Maximum Service Brake towed load shall not exceed 46 tonnes. Hydraulic supply pressure for park brake release is 60bar.

Page Number		Certificate Number
2 of 4		RT/EA/0477/12

Owner Copy / ~~Customer Copy~~ / ~~Network Rail VAB Copy~~





## Vehicle Acceptance Body

### E. RRV ATTACHMENTS

The RRV may work with attachments. Their use in modes E1 or E2 shall comply with the following, as applicable;

- Where specified, and including all lifting accessories, the attachment shall have a current certificate of approval, test and/or thorough examination.
- The attachment shall only be used in accordance with the manufacturer's safety and operating instructions, and the safe system of work for the possession.
- Use of the attachment shall not involve exceeding the vehicle's rated capacity for lifting. Before switching OFF the RCI, the attachment and its contents (eg: bucket full of ballast) shall be moved through the planned range of movements to confirm that the working mode is within the vehicle's lifting capacity.
- Except for the Quick Hitch, attachments should not be connected to the vehicle during on or off tracking, unless safe to do so.
- The attachments shall be maintained in accordance with the manufacturer's and/or other approved instructions.

E1. The Prolec RCI may be switched OFF, typically digging mode including:

- General purpose earth moving buckets.
- Ballast profiling bucket.

NOTE: Caution must be exercised with this type of attachment as its use may adversely effect the stability of the RRV when it is working.

E2. The Prolec RCI shall be switched ON, lifting mode:

- Lifting accessories (LOLER Regulations).
- An attachment that is mechanically fixed to and/or powered from the RRV or which may adversely effect the stability of the RRV.

Any such attachments and its use shall only be with the approval of the Infrastructure Controller, see RIS-1530-PLT Issue 1 Clause 8.4.

**Previous Certificate of Engineering Acceptance:** IF/0080/11

#### Vehicle Data:

Route Availability No:	(Laden) No Charge	(Tare) No Change
Maximum Speed mph:	(Laden) 20	(Tare) 20
Applicable Gauge:	W6a with exception as RIS-1530-PLT	
Applicable Braking Curves:	Road/Rail Vehicles RIS-1530-PLT Clause 5.6.2.1	
Minimum Curve Radius:	80m	

#### First of class:

Not known

Page Number

**3 of 4**

Certificate Number

**RT/EA/0477/12**

**Owner Copy / ~~Customer Copy~~ / Network Rail VAB Copy**



## Vehicle Acceptance Body

**Scope of Certificate:**

Accepted in accordance with the requirements of RIS-1530-PLT Issue 1.

**Scope of work:**

Fitment of direct wheel braking system in accordance with Allan J Hargreaves General Arrangement Drawing AJH/RWB/ASY/005 (floating axle) and AJH/RWB/ASY/006 (fixed axle).  
Scrutiny of associated maintenance plan AJH038 Issue 3.  
Installation of hydraulic trailer service brake system.  
Change of owner/operator.

**Maintenance Plan Documentation:**

Rexquote Operator's and Maintenance Manual RQM10094, Issue 3, dated 8<sup>th</sup> March 2010.  
Maintenance Plan Addendum AJH038, Issue 3, dated 2<sup>nd</sup> November 2012 – Type 9b Rail Wheel Brake System Operation & Maintenance

**Additional Information:**

Serial No. CGG0232254. Rexquote No. 1580. Plant No 35

Authorised By:

*A.V. Kemp*

Print Name: A. V. Kemp

**NETWORK RAIL VAB  
OFFICIAL STAMP**



VEHICLE ACCEPTANCE BODY

Page Number

**4 of 4**

Certificate Number

**RT/EA/0477/12**

Owner Copy / ~~Customer Copy~~ / ~~Network Rail VAB Copy~~